


CTP STITCH TIE INSTALLATION

Brick Veneer to Hollow or Solid CMU Backup

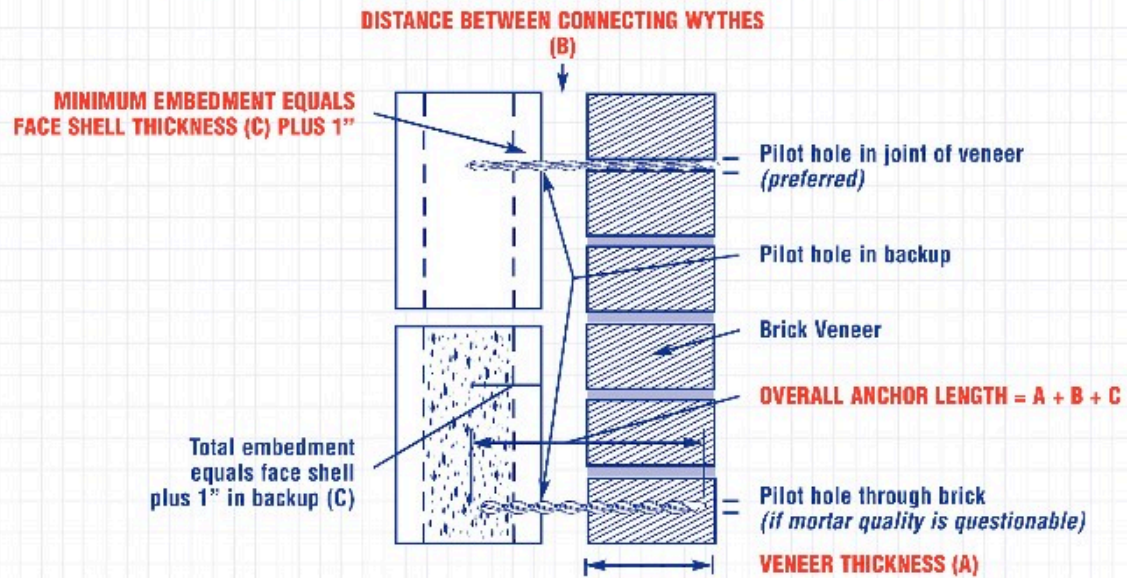

NOTE: Pilot hole should be greater than anchor length by 1" minimum.